



(Corporate Offices)

80 Little Falls Road
Fairfield, NJ 07004
Tel: (973) 575.5120
Fax: (973) 575.5160
Email: info@acudor.com

(Western Region)

4216 North Pecos Rd., Suite 104
Las Vegas, NV 89115
Tel: (702) 644.8710
Fax: (702) 644.8720
Email: LVsales@acudor.com

FW-5050

Installation Instructions

INSTALLATION INSTRUCTIONS

1. Detach closing springs from frame to allow panels to remain open during installation. Leave springs attached to the bracket on the back of the panel to allow faster "re-assembly" later.
2. Slide the *RETURN FLANGE* of Access Door into opening. (Side with bolt(s) will need to be "notched" to allow for Bolt Cover - see diagram above).
3. If unit shall be installed into a masonry brick, masonry straps have been provided to fold out & be placed between bricks prior to mortar drying.
4. Open panel to access mounting holes in *RETURN FLANGE*.
5. Screw through the mounting holes, through fire-rated drywall and into joist system. If the wall/ceiling is concrete or brick, then bolt directly into the masonry through mounting holes.
6. Keys and Knobs for this unit are usually taped to the back of the panel for shipping. This is a self-closing, self-latching unit. Before closing unit, make sure that all Keys & Knobs for the unit's flush lock(s) are in hand & not still taped to the back of the door panel. After mounting screws are in place close unit.
7. Paint the unit if necessary. (Stainless Steel Units or Mill Finish, do **not** require painting).
8. Re-Attach closing spring from bracket on the back of the panel to holes provided on the Hinge Side of frame.
9. When working in a ceiling, this may become a 2-man project to hold the heavy unit in place. The insulated FW-5050 can be heavy depending on its size.

*Note-Both Flush Keys and Knurled Knob are enclosed for the installer's convenience.