




(Corporate Offices)
80 Little Falls Road
Fairfield, NJ 07004
Tel: (973) 575.5120
Fax: (973) 575.5160
Email: info@acudor.com

(Western Region)
4216 North Pecos Rd., Suite 104
Las Vegas, NV 89115
Tel: (702) 644.8710
Fax: (702) 644.8720
Email: LVsales@acudor.com

ADWT

Installation Instructions

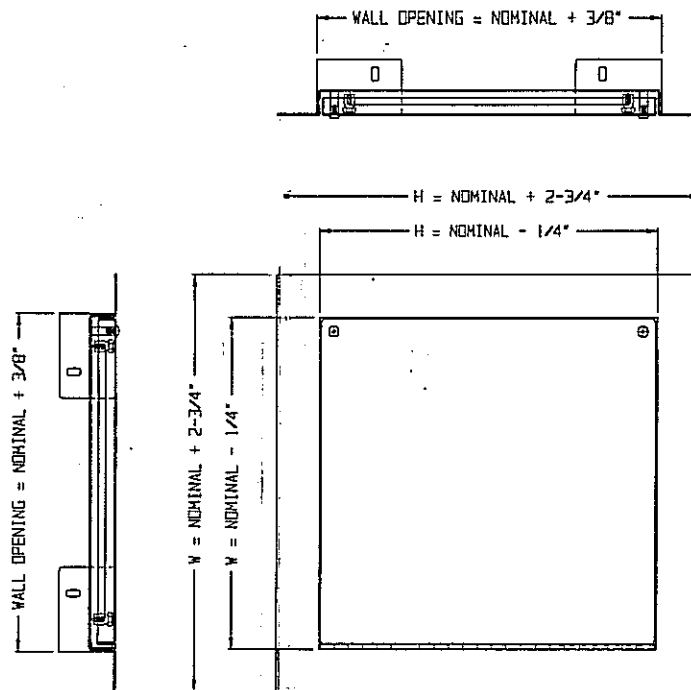

INSTALLATION INSTRUCTIONS

1. A sealant must be put between the door and the condition during installation to prevent air or water from passing through.
2. Slide the *RETURN FLANGE* of Access Door into opening.
3. Open panel to access the .25" x .50" mounting holes in *RETURN FLANGE*.
4. Screw through these holes into joist system or whatever frame is available. Where a frame is unavailable on at least (2) two opposite sides of the Access Panel, unit will need to be "framed out." (Chocks of wood are used in place of normal joists).
5. After screws are in place close unit & secure all screwdriver operated cams shut.
6. Apply sealant between door and condition.
7. Paint the unit if necessary. (Stainless Steel Units or Mill Finish, do **not** require painting).