


FIREMATE™

GORIA CORPORATION

www.Hallmann-Sales.com info@hallmann-sales.com 866-966-9596



Insert twist tie from the outside into the fire extinguisher holder looping back around.

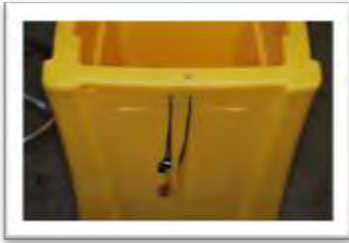

After two loops are made insert fiberglass rod.



Next tighten both sides of the rod to FireMate.



After you tighten the clips, cut the excess plastic tie off using cutters.

