NOTE:
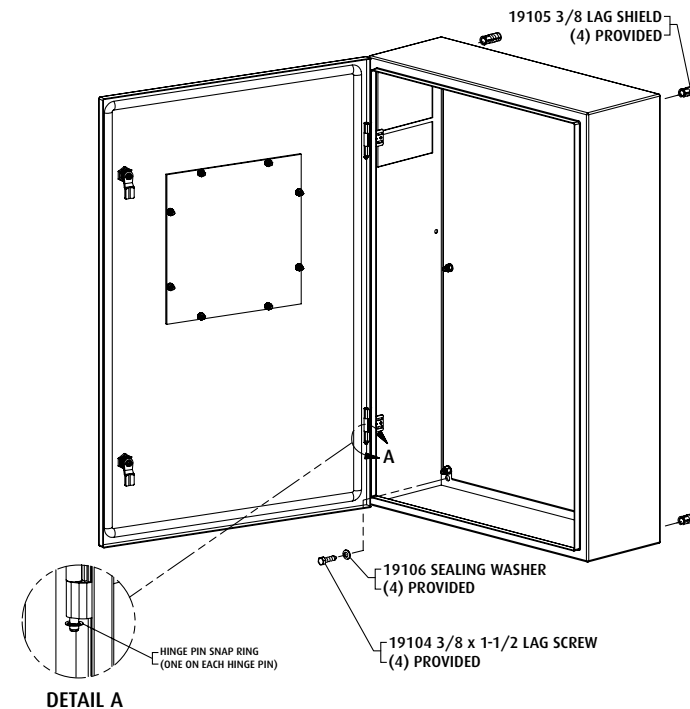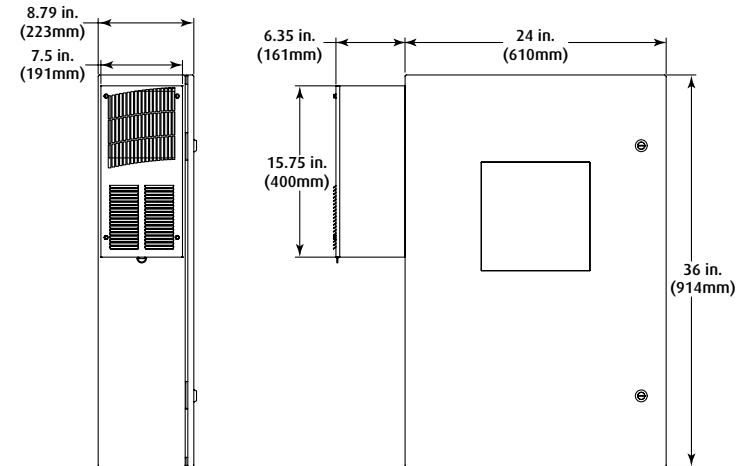
If mounting to brick, block or concrete wall, drill 5/8" diameter holes 2" deep and insert lag shields.

If mounting to wood wall or wood stud, drill 9/32" diameter holes 1-1/2" deep.

INSTALLATION INSTRUCTIONS

1. Using needle-nose pliers remove both hinge pin snap rings.
2. Push out or lift out hinge pins and remove door.
3. Place enclosure on wall and mark top right hole position onto wall. Set enclosure aside.
4. Drill hole according to note above.
5. Insert lag screw into sealing washer. Place enclosure on wall and insert lag screw with sealing washer through enclosure and into drilled hole. Finger tighten only.
6. Allow enclosure to pivot and hang from lag screw.
7. Set a level on top of enclosure and level enclosure. Mark the remaining three mounting holes onto wall.
8. Allow enclosure to pivot and hang from lag screw and drill the remaining three holes.
9. Insert the remaining three lag screws with sealing washers through enclosure into wall and tighten all (4) lag screws.

8.79 in. (223mm)
7.5 in. (191mm)
6.35 in. (161mm)
24 in. (610mm)
15.75 in. (400mm)
36 in. (914mm)

19105 3/8 LAG SHIELD (4) PROVIDED

19106 SEALING WASHER (4) PROVIDED

19104 3/8 x 1-1/2 LAG SCREW (4) PROVIDED

HINGE PIN SNAP RING (ONE ON EACH HINGE PIN)

DETAIL A

STI-7560AC ENCLOSURE MOUNTING INSTRUCTIONS

All specifications and information shown were current as of publication and are subject to change without notice.
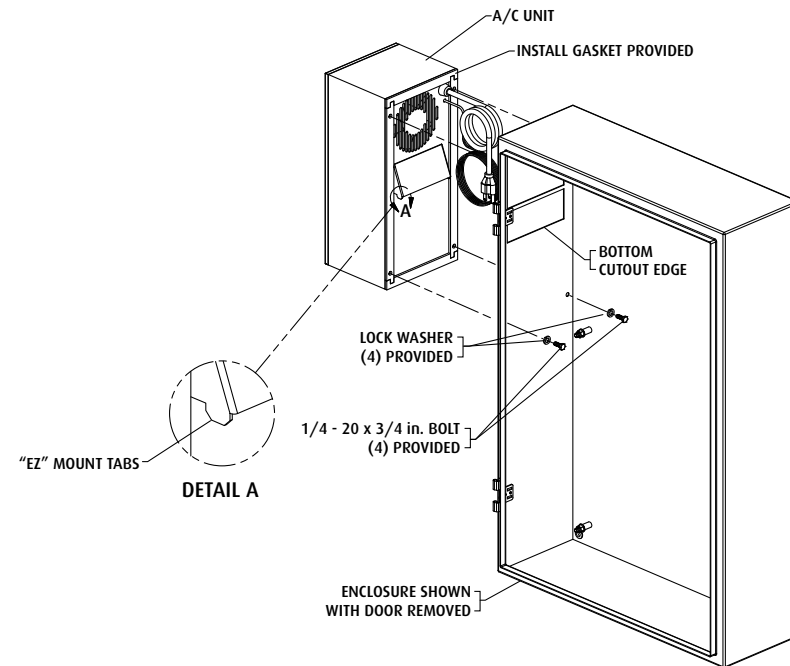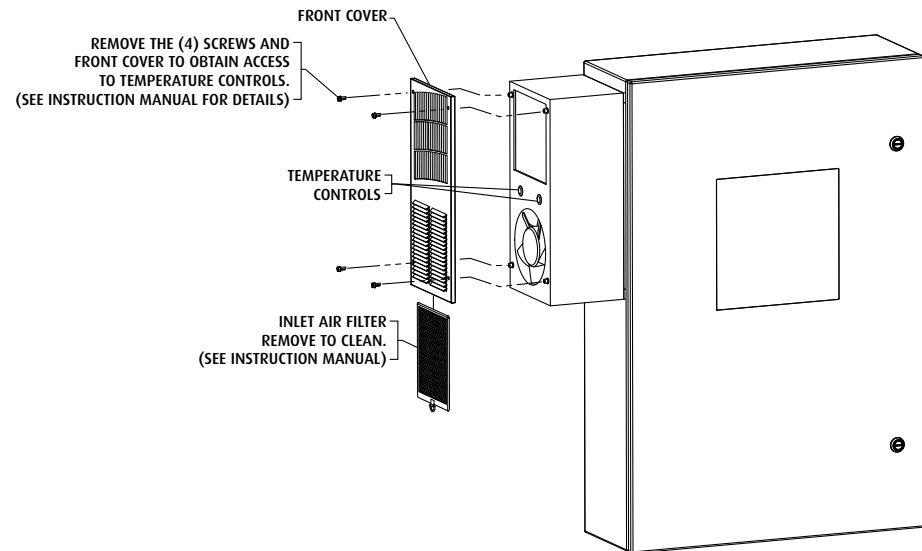
7560AC OCT2010

FRONT COVER

REMOVE THE (4) SCREWS AND
FRONT COVER TO OBTAIN ACCESS
TO TEMPERATURE CONTROLS.
(SEE INSTRUCTION MANUAL FOR DETAILS)

TEMPERATURE
CONTROLS

INLET AIR FILTER
REMOVE TO CLEAN.
(SEE INSTRUCTION MANUAL)

After enclosure has been mounted to the wall, the A/C unit can be mounted to the enclosure.

INSTALLATION NOTES

1. Read and understand instruction manual before mounting and operating A/C unit.
2. Install gasket provided on to A/C unit.
3. Insert power cord and wires through top cutout in enclosure.
4. Mount A/C unit to enclosure by resting EZ mount tabs on bottom cutout edge. This will hold A/C unit in place while bolts are inserted.
5. Insert the (4) 1/4 - 20 x 3/4 inch bolts with lock washers. Make sure the threads of all (4) bolts have engaged with the A/C unit before tightening.
6. Tighten the 4 bolts evenly.
7. Replace door, hinge pins and hinge pin snap rings.

A/C UNIT

INSTALL GASKET PROVIDED

A

BOTTOM
CUTOUT EDGE

LOCK WASHER
(4) PROVIDED

1/4 - 20 x 3/4 in. BOLT
(4) PROVIDED

"EZ" MOUNT TABS

DETAIL A

ENCLOSURE SHOWN
WITH DOOR REMOVED

STI-7560AC MOUNTING A/C UNIT INSTRUCTIONS
All specifications and information shown were current as of publication and are subject to change without notice.

7560AC OCT2010