

Insert twist tie from the outside into the fire extinguisher holder looping back around.



After two loops are made insert fiberglass rod.



Next tighten both sides of the rod to FireMate.




Cut the excess once the plastic ties are tightened.

It is important to put the First Aid Kit on 1st. Press in on the black inserts.



Next put on the Eye Wash Skin and Eye Flush. Press in on the black inserts.

Here is what the completed Fire Safety Center should look like.

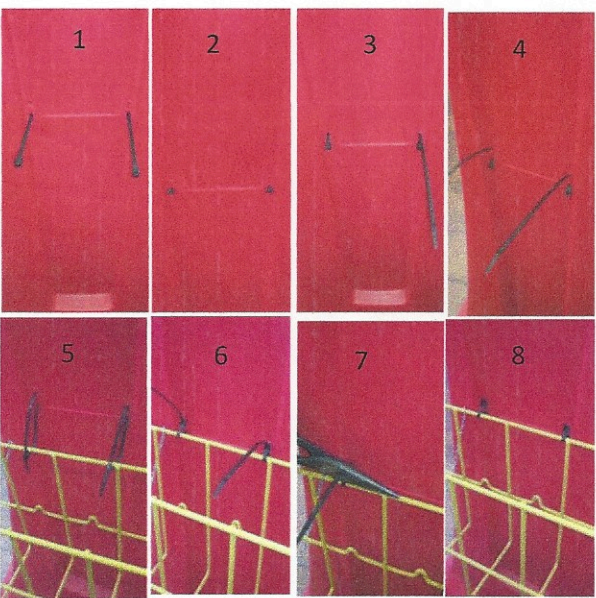

Push the plastic wire tie in the bottom hole. Reach under and push through the top hole. We may want to tape it down so it will not come out.

